

PLC Obsolete Model.

SA/SR-10 Series

Obsolete Model	Obsolete Date
SA-10R	1995,Jan.
SA-10R-C	↓
SA-10R-1	
SA-10S	
SA-10T	
SA-10T-C	
SR-10R	
SR-10R-1	
SR-10S	
SR-10T	
SR-10T-C	
E-10F	
ER-10J	
ER-100J	
ER-300J	
F-10R	
F-10R-1	
F-10S	
F-10T	

SA/SR-20 Series

Obsolete Model	Obsolete Date
SA-20	1992,Dec.
SA-20-1	↓
SR-20	
SR-20-1	1995,Apr.
E-03B-C	↓
E-05NH	
E-21N	
E-12T	
E-25T	
E-01H	
E-02RM	
E-02RS	
E-01AB	
E-21T	
E-52T	
E-02DM-A1	
E-02AD	
E-50T	
E-31T	
E-01B	
E-01B-C	
E-35N	
E-357	

S Series Programming software,HPP

Obsolete Model	Obsolete Date
KOSTAC CAD	1995,Apr.
S-61P	1995,Apr.
S-62P	2004,Nov.
S-01P	1995,Jul.

SA/SR-400 Series

Obsolete Model	Obsolete Date	
SA-400B	1995,Apr.	
SR-400	↓	
S-02W		
S-02W-C		
S-02WR		
S-02WR-C		
S-04B		
S-06B		
S-08B		
S-05J		
S-10J		
S-01N		
S-02N		
S-05N		
S-20N		
S-21N		
S-22N		
S-32NT		
S-34N		
S-36N		
S-01T		1992,Dec.
S-01T-A		1995,Apr.
S-11T		1992,Dec.
S-11T-A		1995,Apr.
S-12T		↓
S-15T		
S-20T-A		
S-20T-A1		
S-21T-1		
S-34T		
S-36T		
S-51T		
S-01S		
S-01AD		
S-01DA		
S-02DA		
S-03DA		
S-01Z		
S-01YC		
S-01RM-S		1994,Mar.
S-01RM-W		1992,Dec.
S-01RS-S		↓
S-01RS-W		
S-02RM		
S-02RS		
S-01DM-A		
S-01DM-R		
D-10J-CC	1994,May	
D-10J-DM	1994,Mar.	
D-30J-DC	↓	
D-30J-SC		

PLC Obsolete Model.

SA/SR Series Programming Tools

Obsolete Model	Obsolete Date
R-03P	1992,Dec.
C-10P	↓
C-11P	↓
C-20P	↓
C-21P	↓
C-22P	↓
C-30P	↓
C-31P	↓
C-31P-A	↓
C-31P-A1	↓
C-31P-R	↓
C-31P-R1	↓
C-50P	1994,Mar.
C-51P	↓
C-52P	↓
C-60P	↓
C-2AR1	1994,May
C-2AR2	↓
C-2A3	↓
C-3A05	1992,Dec.
C-3A1	↓
C-3A2	↓
C-3A3	↓
C-3R05	↓
C-3R1	↓
C-3R2	↓
C-3R3	↓
C-3R4	↓
C-5A05	1994,Mar.
C-5A1	↓
C-5A1-1	↓
C-5A4	↓
C-6R05	↓
C-6R1	↓
C-6R1-1	↓
C-6R4	↓
C-10PJ-1	1992,Dec.
C-10PJ-2	↓
D-20J-DG	1994,Mar.

SG Series

Obsolete Model	Obsolete Date
SG-8CPU	1993,June
SG-8CPU-EX	↓
G-23M	1994,Feb.
G-01LC-B	1995,Apr.
G-01LC-Y	↓
G-01NI	↓
G-02DC	↓
G-02LC-B	↓
G-02LC-Y	↓
G-05S	↓
G-200J-LC	↓
G-20J-PR	↓
G-500J-LC	↓
G-13LCTM-1	1994,May
G-01AB	1996,Jan.
G-01CP/1	↓
G-01CP/2	↓
G-01CP/3	↓
G-01DD	↓
G-01GP	↓
G-03ATB	↓
G-18B-1	↓
G-57M	↓
G-01AD	1999,June
G-01DA	2002,Apr.
G-01DM	↓
G-01F	↓
G-01GF	↓
G-01N	↓
G-01SP	↓
G-01T	↓
G-01TM	↓
G-01W	↓
G-01Z	↓
G-020J-LC	↓
G-02DA	↓
G-02F	↓
G-02RM	↓
G-02W	↓
G-02W-C	↓
G-050--LC	↓
G-05J	↓
G-05N	↓
G-05NH	↓
G-05T	↓
G-08N	↓
G-08NH	↓
G-100J-LC	↓
G-10J	↓
G-10JF	↓

Obsolete Model	Obsolete Date
G-12T	↓
G-13LCK-1	↓
G-13LCK-2	↓
G-13LCT	↓
G-13RM	↓
G-14M	↓
G-15T	↓
G-16B	↓
G-18B	↓
G-18NT	↓
G-18T	↓
G-200J	↓
G-20N	↓
G-20T	↓
G-21T	↓
G-22B	↓
G-24B	↓
G-25N	↓
G-25T	↓
G-26B	↓
G-28B	↓
G-28B-1	↓
G-30JT	↓
G-38N	↓
G-38T	↓
G-50N	↓
G-50N-T	↓
G-52T	↓
G-52T-T	↓
G-55N	↓
G-55T	↓
G-58T	↓
G-70JT	↓
SG-8B	↓
SG-8B-EX	↓
G-05M	2004,Nov.
	↓

PLC Obsolete Model.

SU Series

Obsolete Model	Obsolete Date
SU-6	1993, June
SU-6-C	↓
U-01AD	1994, Jul.
U-23RM	2004, Nov.
U-05S	↓
U-03RS	↓
SU-5	↓
SU-5-C	↓
SU-5E-C	↓
SU-5M-C	↓
U-01GF	↓
U-01KF	↓
U-01KI	↓
U-03PM	↓
U-03RM	↓
U-03RS-AD1	↓
U-04RM	↓
U-05T-H	↓
U-25N-H	↓
U-25T-H	↓
U-30JTB	↓
U-14ABM	↓
U-16DAC-1	↓
U-11DN	↓

DL Series

Obsolete Model	Obsolete Date
D0-IOCON	2004, Nov.
D0-IOCVR	↓
D2-03B	↓
D2-03BDC-2	↓
D2-04B	↓
D2-04TR	↓
D2-06B	↓
D2-08NA	↓
D2-08ND2	↓
D2-09B	↓
D2-09BDC-2	↓
D2-16TD1-3	↓
F2-DEVNETS	↓
D3-05B	↓
D3-08B	↓
D3-10B	↓
D3-16TD-1	↓
D3-325	↓
D3-325	↓
D3-325P	↓
D3-DCM	↓
D4-04AD	↓
D4-06B	↓
D4-08B	↓
D4-14B	↓
D4-16NA-1	↓
D4-16B	↓
D4-18B	↓
D4-425	↓
D4-435	↓
D4-435DC-1	↓
D4-435DC-2	↓
D4-470	↓
D4-470-P800	↓
D4-HPP	↓
D4-PULS	↓
D4-RMSM	↓
D4-RS-FW	↓

SZ Series

Obsolete Model	Obsolete Date
Z-01PM	2004, Sep.

SL Series

Obsolete Model	Obsolete Date
SL-4S	1999, June
SL-4T	↓
L-01NT	↓
L-11NT	↓
L-21NT	↓
SL-4R	2003, Nov.
L-01 J	↓
L-03 J	↓

PLC Repair and Maintenance.

Please use for repair and maintenance only.

Obsolete Model
SU-6H
SC-4X-1
E-01AD
E-01D
E-01Z
E-01S
E-01H-1
E-02N
E-02DA
E-02DM-R1
C-22P-1