

PLC Obsolete Model.

SA/SR-10 Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SA-10R | 1995,Jan. |
| SA-10R-C | ↓ |
| SA-10R-1 | |
| SA-10S | |
| SA-10T | |
| SA-10T-C | |
| SR-10R | |
| SR-10R-1 | |
| SR-10S | |
| SR-10T | |
| SR-10T-C | |
| E-10F | |
| ER-10J | |
| ER-100J | |
| ER-300J | |
| F-10R | |
| F-10R-1 | |
| F-10S | |
| F-10T | |

SA/SR-20 Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SA-20 | 1992,Dec. |
| SA-20-1 | ↓ |
| SR-20 | |
| SR-20-1 | 1995,Apr. |
| E-03B-C | ↓ |
| E-05NH | |
| E-21N | |
| E-12T | |
| E-25T | |
| E-01H | |
| E-02RM | |
| E-02RS | |
| E-01AB | |
| E-21T | |
| E-52T | 1999,June |
| E-02DM-A1 | ↓ |
| E-02AD | |
| E-50T | 2000,Mar. |
| E-31T | 2004,Nov. |
| E-01B | ↓ |
| E-01B-C | |
| E-35N | |
| E-357 | |

S Series Programming software,HPP

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| KOSTAC CAD | 1995,Apr. |
| S-61P | 1995,Apr. |
| S-62P | 2004,Nov. |
| S-01P | 1995,Jul. |

SA/SR-400 Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SA-400B | 1995,Apr. |
| SR-400 | ↓ |
| S-02W | |
| S-02W-C | |
| S-02WR | |
| S-02WR-C | |
| S-04B | |
| S-06B | |
| S-08B | |
| S-05J | |
| S-10J | |
| S-01N | |
| S-02N | |
| S-05N | |
| S-20N | |
| S-21N | |
| S-22N | |
| S-32NT | |
| S-34N | |
| S-36N | |
| S-01T | |
| S-01T-A | 1995,Apr. |
| S-11T | 1992,Dec. |
| S-11T-A | 1995,Apr. |
| S-12T | ↓ |
| S-15T | |
| S-20T-A | |
| S-20T-A1 | |
| S-21T-1 | |
| S-34T | |
| S-36T | |
| S-51T | |
| S-01S | |
| S-01AD | |
| S-01DA | |
| S-02DA | |
| S-03DA | |
| S-01Z | ↓ |
| S-01YC | |
| S-01RM-S | |
| S-01RM-W | |
| S-01RS-S | |
| S-01RS-W | |
| S-02RM | |
| S-02RS | |
| S-01DM-A | |
| S-01DM-R | |
| D-10J-CC | 1994,May |
| D-10J-DM | 1994,Mar. |
| D-30J-DC | ↓ |
| D-30J-SC | |

PLC Obsolete Model.

SA/SR Series Programming Tools

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| R-03P | 1992,Dec. |
| C-10P | ↓ |
| C-11P | ↓ |
| C-20P | ↓ |
| C-21P | ↓ |
| C-22P | ↓ |
| C-30P | ↓ |
| C-31P | ↓ |
| C-31P-A | ↓ |
| C-31P-A1 | ↓ |
| C-31P-R | ↓ |
| C-31P-R1 | ↓ |
| C-50P | 1994,Mar. |
| C-51P | ↓ |
| C-52P | ↓ |
| C-60P | ↓ |
| C-2AR1 | 1994,May |
| C-2AR2 | ↓ |
| C-2A3 | ↓ |
| C-3A05 | 1992,Dec. |
| C-3A1 | ↓ |
| C-3A2 | ↓ |
| C-3A3 | ↓ |
| C-3R05 | ↓ |
| C-3R1 | ↓ |
| C-3R2 | ↓ |
| C-3R3 | ↓ |
| C-3R4 | ↓ |
| C-5A05 | 1994,Mar. |
| C-5A1 | ↓ |
| C-5A1-1 | ↓ |
| C-5A4 | ↓ |
| C-6R05 | ↓ |
| C-6R1 | ↓ |
| C-6R1-1 | ↓ |
| C-6R4 | ↓ |
| C-10PJ-1 | 1992,Dec. |
| C-10PJ-2 | ↓ |
| D-20J-DG | 1994,Mar. |

SG Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SG-8CPU | 1993,June |
| SG-8CPU-EX | ↓ |
| G-23M | 1994,Feb. |
| G-01LC-B | 1995,Apr. |
| G-01LC-Y | ↓ |
| G-01NI | ↓ |
| G-02DC | ↓ |
| G-02LC-B | ↓ |
| G-02LC-Y | ↓ |
| G-05S | ↓ |
| G-200J-LC | ↓ |
| G-20J-PR | ↓ |
| G-500J-LC | ↓ |
| G-13LCTM-1 | 1994,May |
| G-01AB | 1996,Jan. |
| G-01CP/1 | ↓ |
| G-01CP/2 | ↓ |
| G-01CP/3 | ↓ |
| G-01DD | ↓ |
| G-01GP | ↓ |
| G-03ATB | ↓ |
| G-18B-1 | ↓ |
| G-57M | ↓ |
| G-01AD | 1999,June |
| G-01DA | 2002,Apr. |
| G-01DM | ↓ |
| G-01F | ↓ |
| G-01GF | ↓ |
| G-01N | ↓ |
| G-01SP | ↓ |
| G-01T | ↓ |
| G-01TM | ↓ |
| G-01W | ↓ |
| G-01Z | ↓ |
| G-020J-LC | ↓ |
| G-02DA | ↓ |
| G-02F | ↓ |
| G-02RM | ↓ |
| G-02W | ↓ |
| G-02W-C | ↓ |
| G-050--LC | ↓ |
| G-05J | ↓ |
| G-05N | ↓ |
| G-05NH | ↓ |
| G-05T | ↓ |
| G-08N | ↓ |
| G-08NH | ↓ |
| G-100J-LC | ↓ |
| G-10J | ↓ |
| G-10JF | ↓ |

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| G-12T | ↓ |
| G-13LCK-1 | ↓ |
| G-13LCK-2 | ↓ |
| G-13LCT | ↓ |
| G-13RM | ↓ |
| G-14M | ↓ |
| G-15T | ↓ |
| G-16B | ↓ |
| G-18B | ↓ |
| G-18NT | ↓ |
| G-18T | ↓ |
| G-200J | ↓ |
| G-20N | ↓ |
| G-20T | ↓ |
| G-21T | ↓ |
| G-22B | ↓ |
| G-24B | ↓ |
| G-25N | ↓ |
| G-25T | ↓ |
| G-26B | ↓ |
| G-28B | ↓ |
| G-28B-1 | ↓ |
| G-30JT | ↓ |
| G-38N | ↓ |
| G-38T | ↓ |
| G-50N | ↓ |
| G-50N-T | ↓ |
| G-52T | ↓ |
| G-52T-T | ↓ |
| G-55N | ↓ |
| G-55T | ↓ |
| G-58T | ↓ |
| G-70JT | ↓ |
| SG-8B | ↓ |
| SG-8B-EX | ↓ |
| G-05M | 2004,Nov. |
| | ↓ |

PLC Obsolete Model.

SU Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SU-6 | 1993, June |
| SU-6-C | ↓ |
| U-01AD | 1994, Jul. |
| U-23RM | 2004, Nov. |
| U-05S | ↓ |
| U-03RS | ↓ |
| SU-5 | ↓ |
| SU-5-C | ↓ |
| SU-5E-C | ↓ |
| SU-5M-C | ↓ |
| U-01GF | ↓ |
| U-01KF | ↓ |
| U-01KI | ↓ |
| U-03PM | ↓ |
| U-03RM | ↓ |
| U-03RS-AD1 | ↓ |
| U-04RM | ↓ |
| U-05T-H | ↓ |
| U-25N-H | ↓ |
| U-25T-H | ↓ |
| U-30JTB | ↓ |
| U-14ABM | ↓ |
| U-16DAC-1 | ↓ |
| U-11DN | ↓ |

DL Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| D0-IOCON | 2004, Nov. |
| D0-IOCVR | ↓ |
| D2-03B | ↓ |
| D2-03BDC-2 | ↓ |
| D2-04B | ↓ |
| D2-04TR | ↓ |
| D2-06B | ↓ |
| D2-08NA | ↓ |
| D2-08ND2 | ↓ |
| D2-09B | ↓ |
| D2-09BDC-2 | ↓ |
| D2-16TD1-3 | ↓ |
| F2-DEVNETS | ↓ |
| D3-05B | ↓ |
| D3-08B | ↓ |
| D3-10B | ↓ |
| D3-16TD-1 | ↓ |
| D3-325 | ↓ |
| D3-325 | ↓ |
| D3-325P | ↓ |
| D3-DCM | ↓ |
| D4-04AD | ↓ |
| D4-06B | ↓ |
| D4-08B | ↓ |
| D4-14B | ↓ |
| D4-16NA-1 | ↓ |
| D4-16B | ↓ |
| D4-18B | ↓ |
| D4-425 | ↓ |
| D4-435 | ↓ |
| D4-435DC-1 | ↓ |
| D4-435DC-2 | ↓ |
| D4-470 | ↓ |
| D4-470-P800 | ↓ |
| D4-HPP | ↓ |
| D4-PULS | ↓ |
| D4-RMSM | ↓ |
| D4-RS-FW | ↓ |

SZ Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| Z-01PM | 2004, Sep. |

SL Series

| Obsolete Model | Obsolete Date |
|----------------|---------------|
| SL-4S | 1999, June |
| SL-4T | ↓ |
| L-01NT | ↓ |
| L-11NT | ↓ |
| L-21NT | ↓ |
| SL-4R | 2003, Nov. |
| L-01 J | ↓ |
| L-03 J | ↓ |

PLC Repair and Maintenance.

Please use for repair and maintenance only.

| Obsolete Model |
|----------------|
| SU-6H |
| SC-4X-1 |
| E-01AD |
| E-01D |
| E-01Z |
| E-01S |
| E-01H-1 |
| E-02N |
| E-02DA |
| E-02DM-R1 |
| C-22P-1 |