


### 3-2. Checking of power source

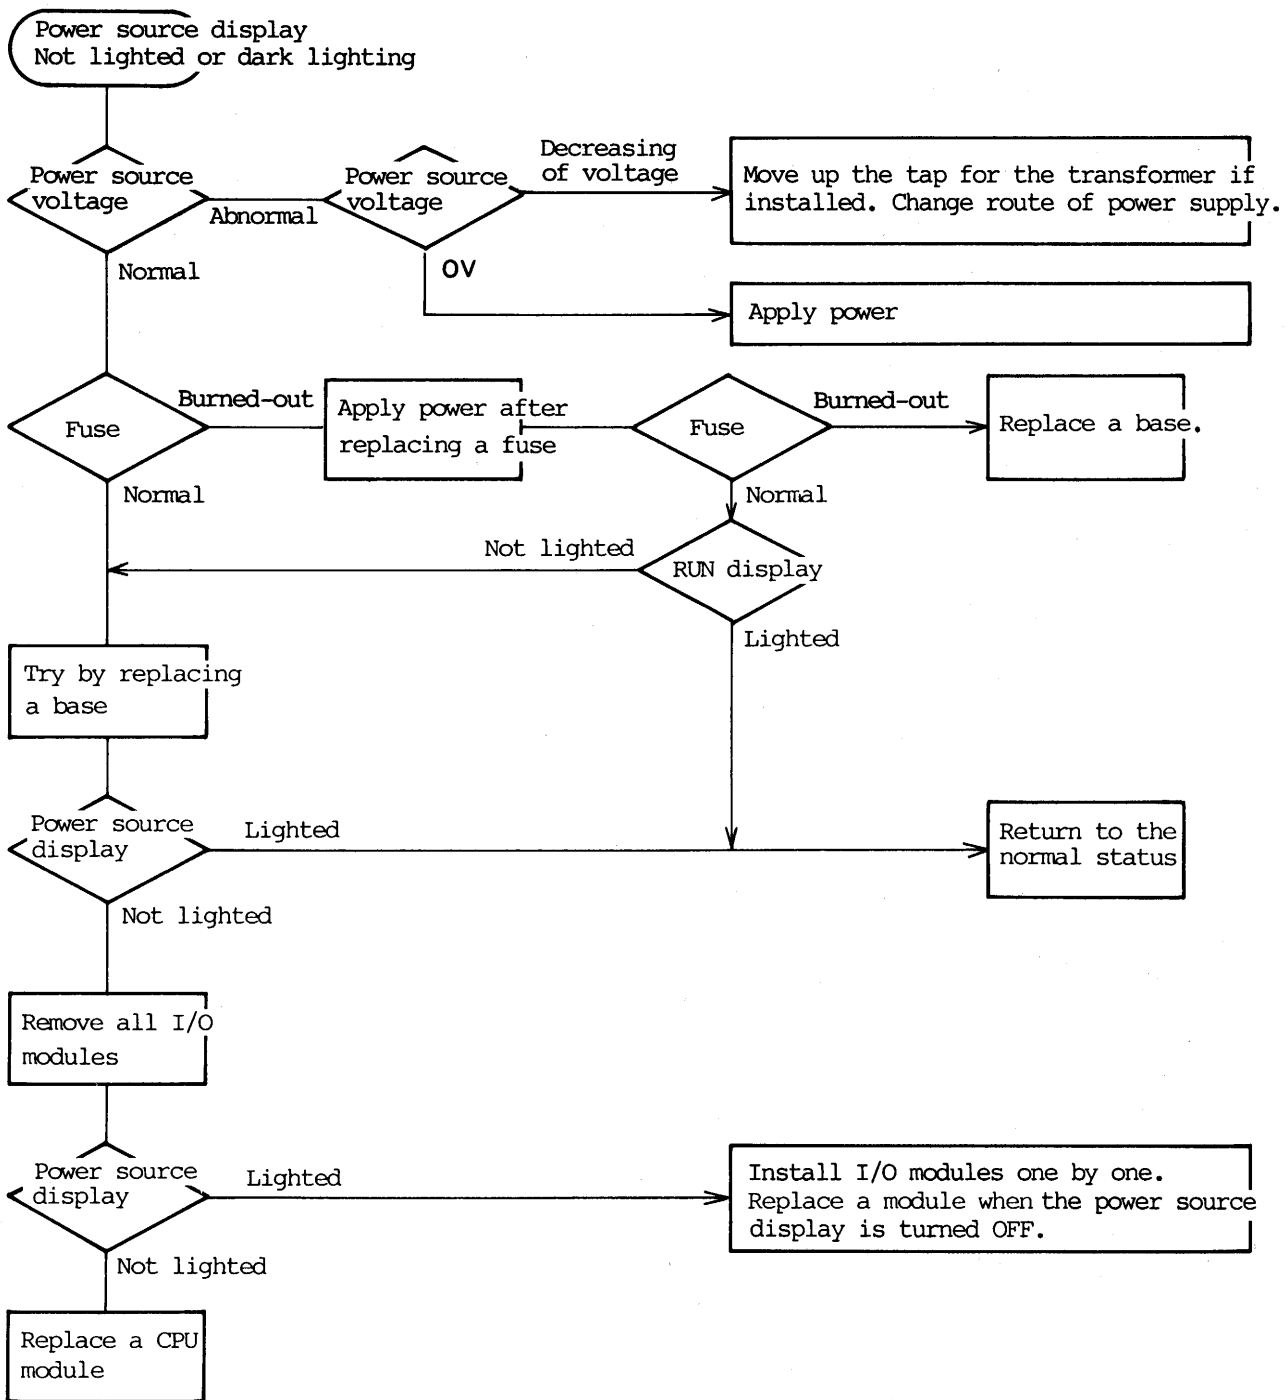

#### How to replace a fuse

Remove screws A and B (shown in drawing) to remove the cover plate. One or two fuses are installed in the locations circled by the dotted chain line. (Number of fuses differs by model number.) Use an attached new fuse for replacement or of the same model number.

